



Single Basin - Medium (Black)



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

1 YEAR
GUARANTEE

Model:
LUCBAS(M)

PLEASE READ ALL INSTRUCTIONS BEFORE USE





Product introduction

 
This item you bought is our Brand New COMMERCIAL BEAUTY SALON SHAMPOO ACRYLIC FIBER SINK/BOWL. This black-coated gloss finish sink is extremely durable light weight, stylish and easy to clean. It comes with all accessories and fixtures. Our Shampoo Sink is designed especially for Beauty Salons, Spas or Barbershops.

This shampoo sink is designed to be Wider and Deeper Which Provides More Work Area. Made of Injection Molded Plastic, Tougher, And Stronger and Eliminates Stains or Fading. Wall-Mounted Bracket is Easy for Installing on Wall.

Installation and assembly guide of the wall-mounted shampoo sink:

Things You May Need:

- Marker/Pencil
- Measuring tape
- Drill
- 1/4 inch drill bit
- Plumber's putty
- Plumber's tape
- Adjustable wrench

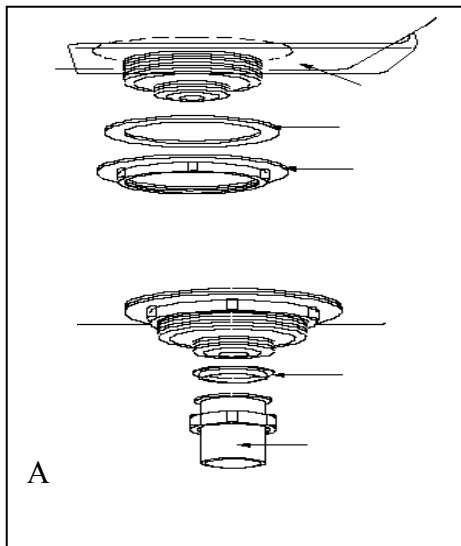


1. Installing the drainer:

Insert the drain into the bathroom sink opening and press down on the drain flange to seat it into position.

Slide the rubber washer over the threaded section of the sink drain. Thread the lock nut onto the threaded section of the drain from underneath and tighten it with the wrench. Screw the steel filter screen if you have.
DO NOT OVERTIGHTEN

2. Installing the faucet and vacuum breaker(see picture B & C)Faucet:

 Take the locking plate off the faucet bottom and insert the faucet into position on the shampoo sink. Roll the locking plate back to the bottom of the faucet from underneath to secure the faucet on the sink with the wrench. Hold the faucet in your hand or have an assistant hold it while you position yourself

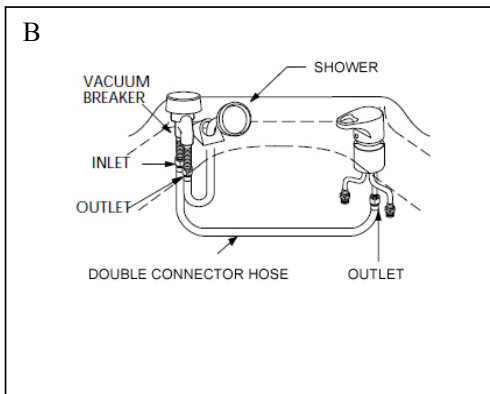

underneath the sink in case it falls down and hit someone.

Wrap the outlet on the faucet with plumber's tape. Connect the metal coupling on one end of the water supply hose to the water supply valve. (One for hot water, the other is for cold water.) Tighten with the wrench. Connect the short outlet of the faucet to the inlet on the vacuum breaker.

Vacuum breaker

Roll out the copper plumbing with the rubber washer and press them into the position from the underside of the sink, place the rubber washer between the breaker head and the sink, then secure the breaker head and copper plumbing with the wrench.

 
Wrap the inlet and outlet on the breaker and with plumber's tape. Connect the metal coupling on the double connector hose. One for faucet outlet, the other is for shower hose. Please be aware of the arrow marks when installing. Tighten them with the wrench.(DO NOT OVERTIGHTEN)

NOTE: Install the vacuum breaker as shown. If the vacuum breaker is installed backwards, it will interfere with the Whiz Spray.

3. Installing the Shower

Put the shower hose through the shower stand; attach the shower hose connector to the Vacuum Breaker outlet.

4. Installing the supporting bracket and secure the bowl

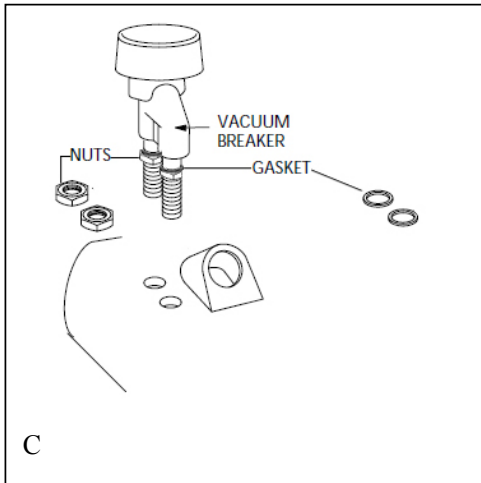



Measure out the proper height for the bracket and mark the drill holes as needed and drill anchor holes. Insert the anchors into the wall, ensuring that they [the upper four holes] are flush.

Position the mounting bracket and secure with the screws to the wall.

Hang the plastic sink onto the bracket. Use the bolt provided to support the rear bottom against the wall. Now you can enjoy using your salon basin!

Warning:

Warranty is void if there's any deliberate destroying or damage caused by improper installation or application.

- **CLEANING INSTRUCTIONS:**
- Use non-abrasive soap and water, **DO NOT USE ABRASIVE CLEANSERS** which will dull the sparkling surface of your bowl.

- **CLEAN ONLY WITH A NON-ABRASIVE LIQUID CLEANER. DO NOT USE Disinfectant cleaner.**
- **LIGHT SCRATCHES AND ABRASIONS: MAY BE REMOVED AND THE ORIGINAL FINISH RESTORED USING :Polishing Compound.**
- With normal care your bowl will last many years.

Note

- Should the plastic sink be broken or crashed, please stop using it immediately;
- Stuck or leaking can be caused by improper installation; if you cannot install it by yourself, ask for help from someone who is experienced; otherwise inconvenience is inevitable.
- If you have noticed anything unclear or mistakes we made, please contact us. Thanks for your cooperation sincerely.





Lucky guarantees that this product has been thoroughly inspected and tested before being dispatched and is free from mechanical and electrical defects and complies with the applicable safety standards. However, should defects due to faulty material or workmanship develop, under normal domestic use, within 6 months from the date of purchase please return the product to the store from where it was purchased for a full refund or replacement.

The following conditions apply:

- 1) Please ensure you retain your receipt as this must be presented when making a claim under the terms of the guarantee. It is impossible to determine the guarantee period without proof of purchase, so please keep this in a safe place.
- 2) If a refund or exchange is required the product must be complete with all accessories, parts and packaging. Missing parts will render the guarantee void.
- 3) Upon receipt of your appliance check it for any transport damage to ensure it is safe for use. Return it to the store as soon as possible for exchange if damaged. The guarantee is void if products are damaged after use, so please do not use the damaged product.
- 4) Your product is designed for normal domestic household use. Failure to read and comply with the instructions for use, cleaning and maintenance will render your guarantee void, so please read these instructions carefully to ensure your safety, and get the most effective use from the product. (e.g. lime scale; water deposits; and/or insect infestation)
- 5) Any abuse, negligent, improper or accidental use or care will render the guarantee void and Creative Housewares (Pty) Ltd will not be liable for any loss or damage.
- 6) Any attempted repair, or replacement of unauthorised parts will render the guarantee void, so please contact an authorised service centre or agent for any service or repair requirements.

Extended 12 Month Limited Guarantee

Lucky offer an extended 12 month limited guarantee from the date of purchase to offer the consumer peace of mind on their purchase. Should defects due to faulty material or workmanship develop, under normal domestic use, within 12 months from the date of purchase, please return the product to the store from where it was purchased for replacement.

Before returning your product, check for the following:

- 1) Your household mains supply socket is working and switched on.
- 2) The mains supply circuit is not overloaded (White trip switch on your DB board is off).
- 3) You have read the trouble shooting guide in your Instructions for Use.
- 4) All accessories and parts are present.

If service or repair becomes necessary outside the guarantee period, this service is still available however all transport/postage, spares and labour costs will be paid by the consumer. All chargeable repairs will require the consumers' approval in writing once the quote is accepted. Once the go-ahead has been received Lucky will undertake to conduct the repair within a reasonable time and maintain the condition of the product as received.

All repairs carry a 3 month guarantee. Lucky will attempt to conduct repairs within reasonable industry standards but cannot be held responsible or liable for any circumstances not under their direct control.

National Service Centre: 086 111 5006

e-mail: help@creativehousewares.co.za

creative housewares

web: www.creativehousewares.co.za

Cape Town

20 Tekstiel Street, Parow, Cape Town, 7493, South Africa
P.O. Box 6156 Parow East, 7501, South Africa
Tel: +27 21 931 8117 Fax: +27 21 931 4058

Johannesburg

9 Hamburg Road, Aeroport, Spartan,
Johannesburg, South Africa
Tel: +27 11 392 5652 Fax: 086 567 9222


1 year guarantee






creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

 P.O. Box 6156 Parow East, 7501, South Africa

 +27 21 931 8117  +27 21 931 4058

Service Centre Helpline: 086 111 5006

 www.creativehousewares.co.za

