

Lucky[®]

LIFESTYLE



DOUBLE TRAY STERILIZER

COMPLIES WITH
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

L
8W


1 YEAR
WARRANTY

Model:
CW1827D

PLEASE READ ALL INSTRUCTIONS BEFORE USE

Dear customer,

Thank you for choosing to purchase a Lucky brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

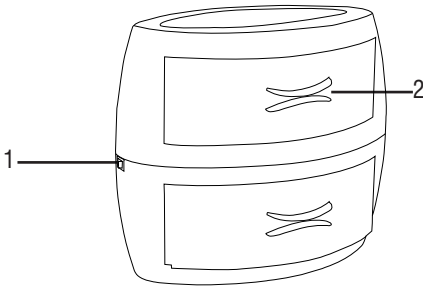

1. Parts description

1. ON/OFF Switch
2. Drawer

2. Safety advice and warnings!

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident. Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section, before use.

2.1. Use or working environment:

- 2.1.1. Keep the working area clean and well lit. Cluttered and dark areas invite accidents.
- 2.1.2. Use the appliance in a well ventilated area.
- 2.1.3. Do not place the appliance on hot surfaces, such as cooking plates, gas burners, ovens or similar items.
- 2.1.4. Place the appliance on a horizontal, flat, stable surface suitable for withstanding high temperatures and away from other heat sources and contact with water.
- 2.1.5. Do not place flammable material near the appliance.
- 2.1.6. Do not use the appliance in association with a programmer, timer or other device that automatically switches it on.
- 2.1.7. Do not use the appliance if the cable or plug is

damaged.

- 2.1.8. Ensure that the voltage indicated on the rating label matches the mains power supply voltage before plugging in the appliance.
- 2.1.9. Connect the appliance to the mains power supply with an earth socket withstanding a minimum of 10 amperes.
- 2.1.10. The appliance's plug must fit into the mains power supply socket properly. Do not alter the plug.
- 2.1.11. If using a multi plug check ratings carefully as the current used by several appliances could easily exceed the rating of the multi plug.
- 2.1.12. If any of the appliance casings breaks, immediately disconnect the appliance from the mains power supply to prevent the possibility of an electric shock.
- 2.1.13. Do not use the appliance if it has fallen on the floor or if there are visible signs of damage.
- 2.1.14. Do not force the power cord. Never use the power cord to lift up, carry or unplug the appliance.
- 2.1.15. Do not wrap the power cord around the appliance.
- 2.1.16. Do not clip or crease the power cord.
- 2.1.17. Do not allow the power cord to hang or to come into contact with the hot surfaces of the appliance.
- 2.1.18. Check the state of the power cord. Damaged or tangled cables increase the risk of electric shock.
- 2.1.19. The appliance is not suitable for outdoor use.
- 2.1.20. Power cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.
- 2.1.21. Do not touch the plug with wet hands.
- 2.1.22. Use appliance only for intended use, namely sterilizing hair cutting & styling instruments.
- 2.1.23. Do not immerse in a water or other liquids- do not use whilst bathing, with wet hands, or over a filled sink. If the appliance falls into water, immediately disconnect the power plug before removing the actual product from water.
- 2.1.24. Only operate the appliance in a room temperature of between 0-40 degrees Celsius.
- 2.1.25. Do not move the appliance when it is in use
- 2.1.26. If the sterilizer is used in a bathroom, unplug it after use since the proximity of water presents a hazard, even when the appliance is switched off.

2.2. Personal safety:

- 2.2.1. CAUTION: Do not leave the appliance unattended during use as there is a risk of an accident.

2.2.2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2.2.3. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

2.3. Use and care:

2.3.1. Fully unroll the appliance's power cable before each use.

2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.

2.3.3. Do not turn the appliance over while it is in use or connected to the mains power supply.

2.3.4. Unplug the appliance from the mains power supply when not in use and before undertaking any cleaning task.

2.3.5. This appliance should be stored out of reach of children.

2.3.6. Never leave the appliance unattended when in use and keep out of the reach of children.

2.3.7. If, for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and **DO NOT USE WATER TO PUT THE FIRE OUT.**

2.4. Service:

2.4.1. Make sure that the appliance is serviced only by suitably qualified technician, and that only original spare parts or accessories are used to replace existing parts/accessories.

2.4.2. If the power cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.

2.4.3. Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

3. Use and care

3.1.1. Connect the plug of the sterilizer to a power supply

3.1.2. Press the ON/OFF button on the left hand side of the appliance

3.1.3. Wait for a minimum of 5 minutes before open-

ing the drawers and placing in the instruments for sterilizing.

3.1.4. Leave the instruments inside to sterilizer for 1 hour

3.1.5. When done switch off the appliance, open the drawer and remove the sterilized instruments carefully.

3.1.6. Switch off the appliance and unplug it from the main power supply. Allow the sterilizer unit to cool before using it again.

4. Cleaning

4.1. Disconnect the appliance from the mains power supply and allow it to cool completely before undertaking any cleaning task.

4.2. Clean the outer parts of the appliance with a damp cloth with a few drops of washing-up liquid and then dry. **CAUTION!** Do not immerse electrical parts of the appliance in any liquid.

4.3. Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.

4.4. Never submerge the appliance in water or any other liquid or place it under running water.


5. Anomalies and repair

5.1. Take the appliance to an authorised support centre if product is damaged or other problems arise.

5.2. If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.

Geagte Klient,

Baie dankie vir u keuse om 'n Lucky handelsmerk produk te koop. Danksy die tegnologie, ontwerp, en werking en die feit dat dit voldoen aan die strengste gehalte standaarde, is u verseker van 'n volle bevredigende gebruik en lang produklewe.

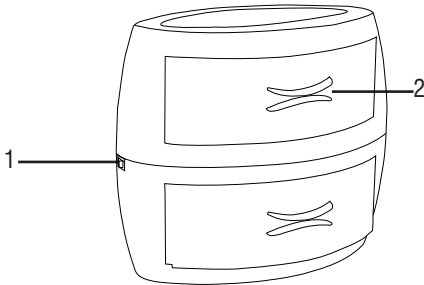

1. Beskrywing

1. Aan/Af skakelaar
2. Laai

2. Safety advice and warnings!

Wanneer elektriese toestelle gebruik word, moet die basiese veiligheidsmaatreëls altyd gevolg word. Maak al die parte wat met kos in aanraking kom deeglik skoon voor gebruik.

2.1. Gebruik en werksomgewing:

- 2.1.1. Hou die werk oppervlak skoon en helder verlig. Ongelukke gebeur in donker areas.
- 2.1.2. Gebruik die produk in 'n goed geventileerde area.
- 2.1.3. Moenie die toestel naby 'n warm gas of elektriese brander of 'n warm oond plaas nie.
- 2.1.4. Streng toesig is nodig as die toestel naby of deur kinders gebruik word.
- 2.1.5. Plaas toestel op 'n stabiele area en weg van water.
- 2.1.6. 'n Brand mag ontstaan as die ketel bedek is of aan vlambare material raak, insluitende gordyne as dit in werking is.
- 2.1.7. Die toestel is nie geskik om op aan 'n tydsbeheer toestel te Koppel nie.
- 2.1.8. Moenie die toestel gebruik as die koord of prop beskadig is.
- 2.1.9. Maak seker die spanning soos aangedui op die

gradering etiket kom ooreen met die hoofspanning.

2.2.10. Prop in elektriese uitlaat.

2.1.11. Die toestel prop moet in die hoof prop pas en moenie die prop verander.

2.1.12. Indien 'n multi prop gebruik word maak seker die toestel se strome oorskry nie die gradering van die multi prop.

2.1.13. Moenie die toestel gebruik as die prop of koord beskadig is nie of enige sigbare skade aan die omhulsel is nie.

2.1.14. Moenie die toestel gebruik as dit op die vloer geval het en daar is sigbare skade.

2.1.15. Moenie die koord gebruik om die toestel te dra, op te tel of van die muurprop te ontkoppel nie.

2.1.16. Die koord mag nooit om die toestel gedraai word nie.

2.1.17. Moenie die koord plooi nie.

2.1.18. Die koord Moenie oor die kant van die tafel of toonbank hang of aan warm oppervlaktes raak nie.

2.1.19. Maak seker die koord is nie beskadig of verstrengel nie.

2.1.20. Die toestel moet nie buite gebruik word nie

2.1.21. Moenie die prop met nat hande hanteer nie.

Translate

2.1.22. Gebruik slegs apparaat vir beoogde gebruik, naamlik die steriliseer van haarsny- en stileringsinstrumente.

2.1.23. Moenie in water of ander vloeistowwe dompel nie - moenie gebruik tydens bad, met nat hande of oor 'n gevulde wasbak nie. As die toestel in water val, moet u die stekker onmiddellik ontkoppel voordat u die werklike produk uit water verwyder.

2.1.24. Gebruik slegs die apparaat in 'n kamertemperatuur van tussen 0-40 grade Celsius.

2.1.25. Moenie die toestel beweeg as dit in gebruik is nie

2.1.26. As die sterilisator in 'n badkamer gebruik word, moet u dit na gebruik gebruik, aangesien die nabyheid van water gevaar bied, selfs wanneer die toestel afgeskakel is.

2.2. Persoonlike veiligheid:

2.2.1. LET WEL: Moenie die toestel sonder toesig laat nie.

2.2.2. Die toestel is nie geskik vir gebruik deur verminderd fisiese verstandelike vermoens of gebrek aan ervaring of kennis tensy hulle opleiding gehad het.

2.2.3. Die toestel is nie 'n speelding and kinders moet altyd toesig he om te verhoed dat hulle met die toestel speel.

2.3. Gebruik en werksomgewing:

- 2.3.1. Die kabel moet ten volle afgewikkel word voor gebruik.
- 2.3.2. Die toestel moet nie gebruik word as die parte of bykomstighede nie behoorlik pas.
- 2.3.3. Die Toestel moet nooit gedraai word terwyl dit in werking is of in die muurprop gekoppel is.
- 2.3.4. Ontkoppel die toestel van die hooftoevoer as dit nie in gebruik is nie en laat dit heeltemal afkoel voordat dit skoongemaak word. As dele afgehaal word of toegevoeg word, moet die toestel nie in werking wees nie.
- 2.3.5. Die toestel moet altyd onder toesig wees wanneer in gebruik en moet buite bereik van kinders gehou word.
- 2.3.6. Die toestel moet buite bereik van kinders gestoor word.
- 2.3.7. As die toestel aan die brand slaan, ontkoppel van die muursok en gooi n kombuis vadoek oor.
MOET NOOIT WATER GEBRUIK!!!

2.4. Diens:

- 2.4.1. Die toestel moet deur 'n gekwalifiseerde tegnikus gediens word.
- 2.4.2 As die koord beskadig word moet dit deur die diensagent of 'n gekwalifiseerde persoon vervang word om brandgevaar te verhoed.
- 2.4.3. Enige misbruik en mislukking om instruksies te volg lewer die waarborg nul en leemte.

3. Gebruik en werksomgewing:

- 3.1.1. Sluit die plug van die sterilisator aan op 'n kragtoevoer
- 3.1.2. Druk die aan / uit-knoppie aan die linkerkant van die toestel
- 3.1.3. Wag vir 'n minimum van 5 minute voordat die laaie ooggemaak word en plaas dit in die instrumente om te steriliseer.
- 3.1.4. Laat die instrumente binne 1 uur na die sterilisator toe
- 3.1.5. As dit klaar is, skakel die apparaat uit, maak die laai oop en verwyder die gesteriliseerde instrumente sorgvuldig.
- 3.1.6. Skakel die toestel uit en trek die stekker uit die hoofstroomtoevoer. Laat die sterilisator-eenheid afkoel voordat dit weer gebruik word.

4. skoonmaak

4.1. Ontkalking Verseker die ketel is ontkoppel van die muurprop voor ontkalking begin. Skalering is 'n probleem in hardewater gebiede.

4.1. Ontkoppel die ketel van die muurprop en plaas in 'n lee houer. Maak die ketel vol water tot by die maximum posisie.

4.1. Voeg 50gram sitroensuur (beskikbaar by apteke en sekere kleinhandelaars) by die water soos voorgeskryf.

4.1. Laat die sitroensuur toe om te werk vir 5 minute of tot die kook bedaar. Gooi die water uit en spoel deegklik en vee skoon.

5. Anomalies and herstel

5.1. Neem die toestel na gemagtigde tegniese sentrum as toestel beskadig is of probleme ontstaan.

5.2. As koneksie na die muurprop beskadig is moet die toestel vervang word volgens waarborg.



Lucky guarantees that this product has been thoroughly inspected and tested before being dispatched and is free from mechanical and electrical defects and complies with the applicable safety standards. However, should defects due to faulty material or workmanship develop, under normal domestic use, within 6 months from the date of purchase please return the product to the store from where it was purchased for a full refund or replacement.

The following conditions apply:

- 1) Please ensure you retain your receipt as this must be presented when making a claim under the terms of the warranty. It is impossible to determine the warranty period without proof of purchase, so please keep this in a safe place.
- 2) If a refund or exchange is required the product must be complete with all accessories, parts and packaging. Missing parts will render the warranty void.
- 3) Upon receipt of your appliance check it for any transport damage to ensure it is safe for use. Return it to the store as soon as possible for exchange if damaged. The warranty is void if products are damaged after use, so please do not use the damaged product.
- 4) Your product is designed for normal domestic household use. Failure to read and comply with the instructions for use, cleaning and maintenance will render your warranty void, so please read these instructions carefully to ensure your safety, and get the most effective use from the product. (e.g. lime scale; water deposits; and/or insect infestation)
- 5) Any abuse, negligent, improper or accidental use or care will render the warranty void and Creative Housewares (Pty) Ltd will not be liable for any loss or damage.
- 6) Any attempted repair, or replacement of unauthorised parts will render the warranty void, so please contact an authorised service centre or agent for any service or repair requirements.

Extended 12 Month Limited Warranty

Lucky offer an extended 12 month limited warranty from the date of purchase to offer the consumer peace of mind on their purchase. Should defects due to faulty material or workmanship develop, under normal domestic use, within 12 months from the date of purchase, please return the product to the store from where it was purchased for replacement.

Before returning your product, check for the following:

- 1) Your household mains supply socket is working and switched on.
- 2) The mains supply circuit is not overloaded (White trip switch on your DB board is off).
- 3) You have read the trouble shooting guide in your Instructions for Use.
- 4) All accessories and parts are present.

If service or repair becomes necessary outside the warranty period, this service is still available however all transport/postage, spares and labour costs will be paid by the consumer. All chargeable repairs will require the consumers' approval in writing once the quote is accepted. Once the go-ahead has been received Lucky will undertake to conduct the repair within a reasonable time and maintain the condition of the product as received.

All repairs carry a 3 month warranty. Lucky will attempt to conduct repairs within reasonable industry standards but cannot be held responsible or liable for any circumstances not under their direct control.

National Service Centre: 086 111 5006

e-mail: help@creativehousewares.co.za

creative housewares

web: www.creativehousewares.co.za

Cape Town

20 Tekstiel Street, Parow, Cape
Town, 7493, South Africa • P.O. Box
6156 Parow East, 7501, South Africa
Tel: +27 21 931 8117
Fax: +27 21 931 4058

Durban

35 Adrain Road, Windermere,
Durban, South Africa, 4001
Tel: +27 31 303 3465
Fax: +27 31 303 8259

Johannesburg

Unit 25 & 26 San Croy
Officepark, Die Agora Road,
Croydon, 1619
Tel: +27 11 392 5652
Fax: +27 11 392 1694

1 year warranty



Lucky waarborg dat hierdie produk deeglik nagegaan en getoets is voordat dit versend is en is vry van meganiese en elektriese afwykings is en voldoen aan die toepaslike veiligheidsstandaarde. Indien gebreke weens foutiewe materiaal of vakmanskap egter onder normale huishoudelike gebruik binne 6 maande vanaf die aankoopdatum ontwikkel word, moet u die produk terugstuur na die winkel waar dit gekoop is vir volle terugbetaling of vervanging.

Die volgende voorwaardes geld:

- 1) Maak asseblief seker dat u die kwitansie behou, aangesien dit aangebied moet word wanneer u 'n eis maak onder die voorwaardes van die waarborg. Dit is onmoontlik om die waarborgtydperk te bepaal sonder bewys van aankoop. Hou dit asseblief op 'n veilige plek.
- 2) Indien 'n terugbetaling of omruil benodig word, moet die produk volledig wees met alle bykomstighede, onderdele en verpakking. Ontbrekende dele sal die waarborg ongeldig maak.
- 3) 3) By ontvangs van u toestel, moet u dit nagaan vir enige vervoerskade om te verseker dat dit veilig is vir gebruik. Stuur dit so spoedig moontlik na die winkel vir ruil indien dit beskadig is. Die waarborg is nietig indien produkte na gebruik beskadig word. Gebruik asseblief nie die beskadigde produk nie.
- 4) U produk is ontwerp vir normale huishoudelike gebruik. Versuim om te lees en te voldoen aan die gebruiksaanwysings, skoonmaak en instandhouding sal u waarborg ongeldig maak. Lees asseblief hierdie instruksies sorgvuldig om u veiligheid te verseker en die beste gebruik van die produk te verkry. (Bv. Kalk, waterafsettings, en / of insekbesmetting)
- 5) Enige misbruik, nalatige, onbehoorlike of toevallige gebruik of versorging sal die waarborg ongeldig maak en Creative Housewares (Edms) Bpk sal nie aanspreeklik wees vir enige verlies of skade nie..
- 6) Enige poging tot herstel of vervanging van ongemagtigde dele sal die waarborg ongeldig maak. Kontak asseblief 'n gemagtigde dienssentrum of agent vir enige diens- of herstelbehoefes.

Uitgebreide 12 maande beperkte waarborg

Lucky bied 'n verlengde 12 maande beperkte waarborg vanaf die aankoopdatum aan om die verbruiker gemoedsrus by hul aankoop aan te bied. Indien gebreke weens foutiewe materiaal of vakmanskap onder normale huishoudelike gebruik binne twaalf maande vanaf die datum van aankoop ontwikkel, moet u die produk terugstuur na die winkel waar dit gekoop is vir vervanging.

Voordat u die produk terugbesorg, kyk na die volgende:

- 1) Jou huishoudelike krag toevoer werk en is aangeskakel.
- 2) Die kragtoevoerstroombaan is nie oorlaai nie (Wit ritskakelaar op jou DB-kaart is af).
- 3) U het die probleem gids gelees in u gebruiksaanwysings.
- 4) Alle bykomstighede en onderdele is teenwoordig.

As diens of herstel buite die waarborgperiode nodig word, is hierdie diens nog beskikbaar, maar alle vervoer / posgeld, onderdele en arbeidskoste sal deur die verbruiker betaal word. Alle vergoedbare herstelwerk sal die verbruikers se goedkeuring skriftelik vereis sodra die kwotasie aanvaar word. Sodra die gaan voort ontvang is, sal Lucky onderneem om die herstel binne 'n redelike tyd te doen en die toestand van die produk te behou soos ontvang.

Alle herstelwerk dra 'n 3 maande waarborg. Lucky sal poog om herstelwerk te doen binne redelike bedryfsstandaarde, maar kan nie aanspreeklik gehou word vir enige omstandighede wat nie onder hulle direkte beheer is nie.

National Service Centre: 086 111 5006

e-mail: help@creativehousewares.co.za

creative housewares

web: www.creativehousewares.co.za

Cape Town

20 Tekstiel Street, Parow, Cape Town, 7493, South Africa
P.O. Box 6156 Parow East, 7501, South Africa
Tel: +27 21 931 8117 Fax: +27 21 931 4058






Johannesburg

9 Hamburg Road, Aeroport, Spartan,
Johannesburg, South Africa
Tel: +27 11 392 5652 Fax: 086 567 9222

1 jaar waarborg

Durban
35 Adrain Road, Windermere,
Durban, South Africa, 4001
Tell: +27 31 303 3465
Fax: +27 31 303 8259

creative housewares

 20 Tekstiel St, Parow, Cape Town, 7493, RSA
 P.O. Box 6156 Parow East, 7501, RSA
 +27 21 931 8117  +27 21 931 4058
Service Centre Helpline: 086 111 5006
 www.creativehousewares.co.za

Johannesburg
Unit 25 & 26 San Croy Office Park
Die Agora Road, Croydon, 1619
Tell: +27 11 392 5652
Fax: +27 11 392 1694