

Lucky[®]

LIFESTYLE



MAGICUT ELECTRICAL CLIPPER

complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

L
10 W

1 YEAR
GUARANTEE

Model:
HC51

PLEASE READ ALL INSTRUCTIONS BEFORE USE



Important:

- Carefully read all instructions before using this appliance.
- Do not immerse in water or other liquids - do not use whilst bathing or with wet hands or over a sink filled with water. If the appliance falls into water, disconnect the power plug immediately before removing appliance from the water.
- If the power supply cord is damaged, it must be replaced by the manufacturer or its designated service agent.
- Do not leave the appliance unattended when it is plugged in.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Use the appliance for its intended use of cutting human hair only.
- Do not carry, lift or unplug this appliance by pulling the power supply cord.
- Make sure the power supply cord is not twisted or kinked.
- Do not use this appliance outdoors.
- Do not use the appliance if the blades are broken or damaged.
- Do not operate this appliance where aerosol spray products are being used, or where oxygen is being administered. To clean your appliance after use, disconnect from power supply and wipe with a slightly damp cloth and wipe dry.
- Children should be supervised at all times to ensure they do not play with the appliance.
- Do not place or store the appliance where it can fall or be pulled into a bath or sink.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Keep the cord away from rough, sharp or heated surfaces.
- Do not pull, twist, or wrap the cord around the appliance.
- Do not place the appliance on any surface while it is switched on.
- Do not use this appliance with a damaged or broken comb nor with teeth missing from the blades as injury may occur.
- How to use:
 - The correct lubricating oil must be used, apply the oil each time after use. "Lucky" clipper oil is recommended for use on this clipper.
 - Before connecting the appliance to the mains, ensure that the voltage on the rating label corresponds to the voltage of the mains outlet.

How to use the power screw:

- The blade track is set to the optimum setting in production; however, the blade track can be changed as a result of the voltage fluctuations.
- You can set this blade track if necessary, use the comb (included with your pack) or screwdriver. Do the following in order to adjust it:
 - Switch the clipper on.
 - Turn the adjusting screw clockwise until hear a loud noise.
 - Then turn the adjusting screw anti-clockwise until the loud noise stops. This is the optimum point for the clipper to operate, leave the screw in this position.
- Cutting with attachment combs:
 - Depending on the desired hair cut, the clipper can be operated with or without an attachment comb.
 - There are four attachment combs (3, 6, 9 and 12mm) included with this product.
 - To attach a comb, hold comb with the teeth showing upward and slide it onto and along the clipper blade until the front of the comb firmly clicks into the clipper blade and push the back of the comb down until it is clipped into position.
 - To remove the comb, simply pull the comb upward and away from the clipper blade.

How to change the blades:

- Switch off the clipper and disconnect from the mains.
- Undo both screws on the blades; remove the bottom blade and top blade.
- When assembling, the bottom blade and top blade should be aligned as follows:
 - Raise the adjustable taper control lever to the shortest cutting length.
 - The distance between the front edge of the bottom blade and the front edge of the top blade should be between 0.8mm and 1.5mm.
 - The sides of the two blades should be parallel to each other.
 - The first tooth of the top blade (from the left) must cover the first tooth of the bottom blade.
 - The tooth on the far right of the top blade must touch the outermost large tooth of the bottom blade.
- Once aligned tighten both screws.

How to use the blade lever:

- The lever is conveniently located above the on/off switch so it can easily be adjusted while the clipper is in your hand.
- The lever adds versatility to the clipper by allowing a gradual change to the length of a cut without an attachment comb.

- When the lever is in the uppermost position, the blades will give the closest cut leaving the hair very short. Pushing the lever gradually downward increases the cutting length.
- In its lowest position, the lever will leave the hair approximately the same length as a #1 comb.
- The lever will also extend the blade's life as a longer cut requires less work from the blades.
- While the clipper is running, move the Lever from "close cut" to "longer cut" a number of times. This will help keep cut hair away from the blades. If the clipper stops cutting, and the method above does not help, then the blades are blunt and need to be replaced.

Cleaning:

- Wipe the appliance with a damp cloth and then dry thoroughly.



Lucky guarantees that this product has been thoroughly inspected and tested before being dispatched and is free from mechanical and electrical defects and complies with the applicable safety standards. However, should defects due to faulty material or workmanship develop, under normal domestic use, within 6 months from the date of purchase please return the product to the store from where it was purchased for a full refund or replacement.

The following conditions apply:

- 1) Please ensure you retain your receipt as this must be presented when making a claim under the terms of the guarantee. It is impossible to determine the guarantee period without proof of purchase, so please keep this in a safe place.
- 2) If a refund or exchange is required the product must be complete with all accessories, parts and packaging. Missing parts will render the guarantee void.
- 3) Upon receipt of your appliance check it for any transport damage to ensure it is safe for use. Return it to the store as soon as possible for exchange if damaged. The guarantee is void if products are damaged after use, so please do not use the damaged product.
- 4) Your product is designed for normal domestic household use. Failure to read and comply with the instructions for use, cleaning and maintenance will render your guarantee void, so please read these instructions carefully to ensure your safety, and get the most effective use from the product. (e.g. lime scale; water deposits; and/or insect infestation)
- 5) Any abuse, negligent, improper or accidental use or care will render the guarantee void and Creative Housewares (Pty) Ltd will not be liable for any loss or damage.
- 6) Any attempted repair, or replacement of unauthorised parts will render the guarantee void, so please contact an authorised service centre or agent for any service or repair requirements.

Extended 12 Month Limited Guarantee

Lucky offer an extended 12 month limited guarantee from the date of purchase to offer the consumer peace of mind on their purchase. Should defects due to faulty material or workmanship develop, under normal domestic use, within 12 months from the date of purchase, please return the product to the store from where it was purchased for replacement.

Before returning your product, check for the following:

- 1) Your household mains supply socket is working and switched on.
- 2) The mains supply circuit is not overloaded (White trip switch on your DB board is off).
- 3) You have read the trouble shooting guide in your Instructions for Use.
- 4) All accessories and parts are present.

If service or repair becomes necessary outside the guarantee period, this service is still available however all transport/postage, spares and labour costs will be paid by the consumer. All chargeable repairs will require the consumers' approval in writing once the quote is accepted. Once the go-ahead has been received Lucky will undertake to conduct the repair within a reasonable time and maintain the condition of the product as received.

All repairs carry a 3 month guarantee. Lucky will attempt to conduct repairs within reasonable industry standards but cannot be held responsible or liable for any circumstances not under their direct control.

National Service Centre: 086 111 5006

e-mail: help@creativehousewares.co.za

creative housewares

web: www.creativehousewares.co.za

Cape Town

20 Tekstiel Street, Parow, Cape
Town, 7493, South Africa • P.O. Box
6156 Parow East, 7501, South Africa
Tel: +27 21 931 8117
Fax: +27 21 931 4058

Durban


35 Adrian Road, Windermere,
Durban, South Africa, 4001
Tel: +27 31 303 3465
Fax: +27 31 303 8259


Johannesburg

Unit 25 & 26 San Croy
Officepark, Die Agora Road,
Croydon, 1619
Tel: +27 11 392 5652
Fax: +27 11 392 1694

1 year guarantee


creative housewares

 20 Tekstiel St, Parow, Cape Town, 7493, RSA

 P.O. Box 6156 Parow East, 7501, RSA

 +27 21 931 8117  +27 21 931 4058

Service Centre Helpline: 086 111 5006

 www.creativehousewares.co.za