



# Lucky<sup>®</sup>

LIFESTYLE



## LA BELLE HOOD STEAMER

complies with  
INTERNATIONAL  
IEC60335  
SAFETY SPECIFICATIONS

*L*  
650W

**1 YEAR**  
WARRANTY

Model:  
SHSSAL6A


**PLEASE READ ALL INSTRUCTIONS BEFORE USE**





## Dear customer,

Thank you for choosing to purchase a Lucky brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

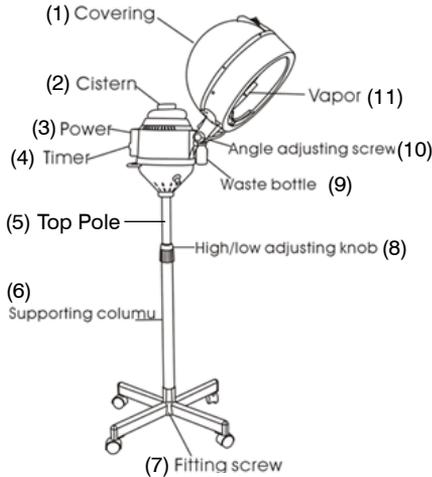

## Parts description

1. Hood (Covering)
2. Cistern
3. Power
4. Timer
5. Top pole
6. Supporting Rod (Supporting column)/ bottom pole
7. Fixing screw
8. High/low adjusting knob
9. Waste bottle
10. Angle adjusting screw
11. Vapor

## 2. Safety advice and warnings!

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident. Clean all the parts of the product that will be in contact with face, as indicated in the cleaning section, before use.

### 2.1. Use or working environment:

- 2.1.1. Keep the working area clean and well lit. Cluttered and dark areas invite accidents.
- 2.1.2. Use the appliance in a well ventilated area.
- 2.1.3. Do not place the appliance on hot surfaces, such as cooking plates, gas burners, ovens or similar items.
- 2.1.4. Keep children and bystanders away when using this appliance.
- 2.1.5. Place the appliance on a horizontal, flat, stable surface away from other heat sources.

- 2.1.6. Do not use the appliance in association with a programmer, timer or other device that automatically switches it on.
- 2.1.7. Do not use the appliance if the cable or plug is damaged.
- 2.1.8. Ensure that the voltage indicated on the rating label matches the mains power supply voltage before plugging in the appliance.
- 2.1.9. Connect the appliance to the mains power supply with an earth socket withstanding a minimum of 10 amperes.
- 2.1.10. The appliance's plug must fit into the mains power supply socket properly. Do not alter the plug.
- 2.1.11. If using a multi plug check ratings carefully as the current used by several appliances could easily exceed the rating of the multi plug.
- 2.1.12. If any of the appliance casings breaks, immediately disconnect the appliance from the mains power supply to prevent the possibility of an electric shock.
- 2.1.13. Do not use the appliance if it has fallen on the floor or if there are visible signs of damage.
- 2.1.14. Do not force the power cord. Never use the power cord to lift up, carry or unplug the appliance.
- 2.1.15. Do not wrap the power cord around the appliance.
- 2.1.16. Do not clip or crease the power cord.
- 2.1.17. Do not allow the power cord to hang or to come into contact with the surfaces.
- 2.1.18. Check the state of the power cord. Damaged or tangled cables increase the risk of electric shock.
- 2.1.19. Power cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.

### 2.2. Personal safety:

- 2.2.1. CAUTION: Do not leave the appliance unattended during use as there is a risk of an accident.
- 2.2.2. This appliance is only for domestic use, not for industrial or professional use. It is not intended to be used by guests in hospitality environments such as bed and breakfast, hotels, motels, and other types of residential environments, even in farm houses, offices and other work environments.
- 2.2.3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2.2.4. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

## 3. Instructions for use

### 3.1. Before use:

- 3.1.1. Remove the appliance's protective film (if applicable).
- 3.1.2. Before using the product for the first time, clean





the parts that will come into contact with face in the manner described in the cleaning section.

3.1.3. Fully charge the shaver before the first use. It takes about 8 hours to charge the shaver fully.

### 3.2. ASSEMBLY INSTRUCTIONS:

3.2.1. Put the wheel pole on top of the other on the circle so that it balances

3.2.2. Take the bottom pole and insert it on the center of the wheels, holding them (both the wheels and the bottom pole) applying a little bit of pressure turn the wheels upside down and put a screw on the intersection of the wheels to tie them together with the bottom pole.

3.2.3. Fit the top pole on the bottom pole, then put the adjusting knob, adjust the top pole to your desired height. Turn the adjusting knob to right till it's rigid to keep the poles at your desired height.

3.2.4. Insert the hood.

### 3.3. Operating Instruction

3.3.1. Fill the cistern with clean water, tighten the screw and then chuck it in the machine Caution: before each use make sure that the cistern is filled with water.

3.3.2. Put the waste bottle into place as shown in the parts description section. Failure to do so may lead to water dropping down from the hood or boiling noise.

3.3.3. Fully unroll the power cord and plug it to a suitable power supply

3.3.4. Select your desired time from 0-60 minutes.

3.3.5. Turn on power; by pressing the switch button on one or two level, after selecting your desired temperature wait for the steam to come out, and then start using the product.

3.3.6. When the time finishes the timer will ring for few seconds.

3.3.7. When done using the Steamer remove the waste bottle.

### 3.4. Once you have finished using the appliance:

3.4.1. Allow appliance to cool down.

3.4.2. Unplug the appliance from the mains power supply.

3.4.3. Clean the appliance as described in the cleaning section.

### 4. Cleaning and maintenance:

4.1. Disconnect the appliance from the mains and allow it to cool completely before undertaking any cleaning task.

4.2. Empty the waste bottle and rinse it.

4.3. Clean the appliance with a damp cloth with a few drops of washing-up liquid and then dry. CAUTION! Do not immerse electrical parts of the pan in any liquid.

4.4. Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.

4.5. Never submerge the appliance in water or any

other liquid or place it under running water.

### 5. Anomalies and repair

5.1. Take the appliance to an authorised support centre if product is damaged or other problems arise.

5.2. If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.



creative housewares  
🏠 20 Tekstiel St, Parow. cape Town. 7493, RSA  
✉ P.O. Box 6156 Parow East, 7501, RSA  
☎ +27 21 931 8117 / Helpline: 086 111 5006  
🕒 +27 63 014 0457 📞 +27 21 931 4058  
🌐 [www.creativehousewares.co.za](http://www.creativehousewares.co.za)

